
St. Jacobs Scoreboard Instructions

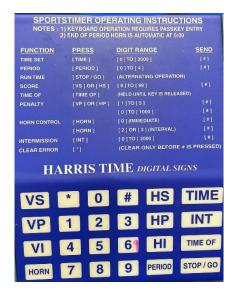

Reset Clock to Time of Day:




This will clear penalties, scores and period number. It does not clear remaining game time.

Warm-up:



To start the clock running at any time or to stop the clock if you want to lengthen the warmup time (eg. if teams or officials are not ready).

Starting each period:

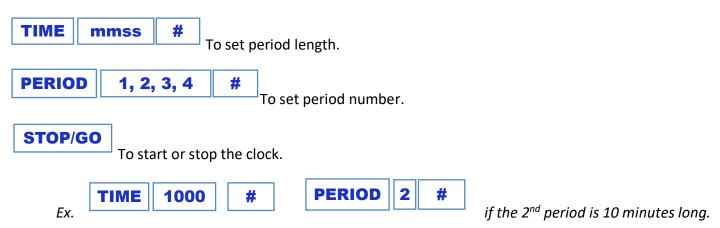

Note: Period number and length must be set each period.


To correct period or remaining duration just use same process.

Scores:


Penalties:




Where the first number (1, 2, 3, 4....) indicates which penalty it is $(1^{st}, 2^{nd}, 3^{rd}, etc.)$. Then mmss indicates the length of the penalty. Note: Only two penalties show on the board, but the others are stored and will show when the earlier penalties end.

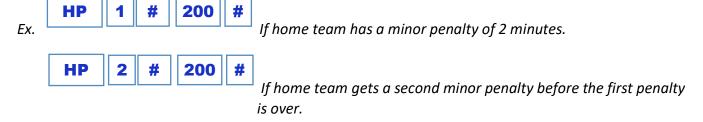

To correct a penalty:

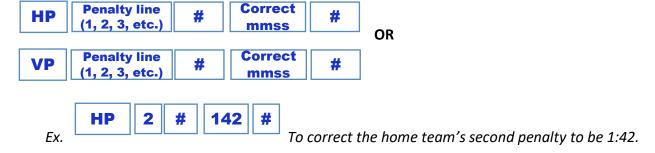

To delete a penalty:

 

Time Outs	
There is no bu	_


There is no button for Time Outs.

Two options:

1) Write down current time on clock.


Set a 30 second Time Out



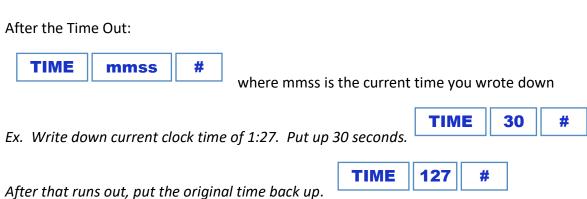

2) The referees may just count down the 30 seconds themselves and whistle to resume play.

 Horn:




Programmable Interval Horn:

An interval horn can be set to sound time durations of 1-9 minutes. It will only work for full minutes.



It will be cancelled when the period ends or by entering 0 for the time.

 Ex. If a U7, U8 or U9 team needs an interval horn set every 2 minutes, do the following:



NOTE: You need to set the horn interval at the start of each period.